

THERMOSTATS & TEMPERATURE CONTROLS CROSS REFERENCE

PART NO.	MANUFACTURER & PART NUMBER	DESCRIPTION	SPECIAL INSTRUCTIONS
8403-1	Ranco F-17-142	Thermostat	Use 8403-56
8403-2	M.H. Q412A1006	Sub Base	
8403-3	M.H. T870C1040	Thermostat	
8403-4	M.H. T870D1031	Thermostat	
8403-5	M.H. Y361D1010	Therm. & Sub Base	
8403-6	M.H. Q405A1000	Sub Base	Use 8403-73
8403-7	M.H. Q405E1006	Sub Base	
8403-8	M.H. T87C1005	Therm. Cooling only	
8403-9	M.H. Q405Q1059	Sub Base	
8403-10	M.H. T87A1009	Thermostat	Use 8403-74
8403-11	M.H. L6021A1005	Ther. Outdoor	Use 8403-54
8403-12	M.H. T870E1006	Thermostat	
8403-13	M.H. Q412B1021	Sub Base	Use 8403-124
8403-14	M.H. Q405E1014	Sub Base	
8403-15	Ranco A12-1530	Cold Control	
8403-16	Ranco A18-130	Thermostat	
8403-17	M.H. Q412A1014	Sub Base	
8403-18	T.I. 20400L64-15	Limit Control	
8403-19	Ranco F11-1007	Cut our swich	
8403-20	M.H. HA4EE11491	Humidistat	
8403-21	Ranco A30-1519	Control Therm.	
8403-22	Ranco Type C22-7009	Thermostat	
8403-23	Ranco A14-144	Thermostat	
8403-24	M.H. Y361E1027	Therm. & Sub Base	
8403-25	M.H. Y361E1035	Therm. & Sub Base	
8403-26	Ranco A10-2095	Control Therm.	
8403-27	Ranco A11-300	Thermostat	
8403-28	Penn 442AT11B	Water Chil. Cont.	
8403-29	T.I. 20400L64-283	Limit Control	Use 8403-89
8403-30	Ranco A18-132	Therm. Outdoor	
8403-31	Ranco A18-132	Thermostat	Make FR. 8403-30
8403-32	Ranco D52-108	De Ice Control	
8403-33	Ranco D52-109	De Ice Control	Use 7600-100
8403-34	Ranco D52-110	De Ice Control	Use 7600-101
8403-35	Ranco D52-118	De Ice Control	Use 7600-99, -101
8403-36	Ranco D52-117	De Ice Control	Use 7600-99
8403-37	Ranco D52-122	De Ice Control	Use 7600-99
8403-38	Ranco D52-123	De Ice Control	Use 7600-99
8403-39	Ranco A30-1625	Control Therm.	Use 8403-57
8403-40	Ranco A30-1551	Thermostat	
8403-41	Ranco C12-5114	Thermostat	
8403-42	T.I. 20420F30-129-112	Thermostat	
8403-43	T.I. 20420L18-351-123	Thermostat	
8403-44	T.I. 20425L26-636-108	Thermostat	
8403-45	Ranco A30-1585	Control Therm.	
8403-46	T.I. 20425L28-351-108	Thermostat	Use 8403-44
8403-47	Ranco A30-1587	Thermostat	
8403-48	M.H. T870G1038	Thermostat	Use 7600-238
8403-49	M.H. Q412H1025	Therm. & Sub Base	

PART NO.	MANUFACTURER & PART NUMBER	DESCRIPTION	SPECIAL INSTRUCTIONS
8403-50	Ranco A38-1503	Thermostat	
8403-51	Bendix Friez Model 83-55	Humidistat	Use 8403-59
8403-52	Ranco A38-1505	Thermostat	
8403-53	Penn Controls Style #229	Thermostat	
8403-54	Ranco 011-3019	Thermostat	
8403-55	Penn Type #239, Code 5T7	Thermostat	
8403-56	Ranco F17-524	Thermostat	
8403-57	Ranco A30-1625	Thermostat	Use 8403-79
8403-58	T.I. 20400L2-36L150-4	Limit Control	Use 8403-29, -110
8403-59	Precision Products 83366	Humidistat	
8403-59	Ranco J11-6501	Humidistat	
8403-60	Norwalk DR-19	Thermostat	Use 8403-61
8403-61	Norwalk DR-A21	Thermostat	Use 8403-158
8403-62	Ranco C12-5191	Thermostat	
8403-63	Ranco A30-1753	Control Freeze Up	
8403-64	M.H. T822C1108	Thermostat	8403-153
8403-65	Ranco C17-9004	Thermostat	
8403-66	Ranco A30-1755	Cont. Fan Mtr Cut Off	
8403-67	Ranco A22-2451	Control Shut Down	
8403-68	M.H. T870D1239	Thermostat	Use 8403-129
8403-69	M.H. T834C1004	Thermostat	Use 7600-361
8403-70	M.H. T870B1124	Thermostat	Use 8403-125
8403-71	M.H. Q412C1004	Sub Base	
8403-72	Ranco 010-2165	Thermostat	
8403-73	Honeywell Q539A1006	Sub Base	Use 8403-6, or 7600-237
8403-74	Honeywell T87F1800	Thermostat	Use 8403-10 or 7600-237
8403-75	G.F. 3ART1754	Thermostat	
8403-75	Ranco RC32-1204	Thermostat	Use 8403-77
8403-76	Ranco A30-1776	Thermostat	
8403-77	Ranco A30-1779	Thermostat	Use 8403-75
8403-78	Ranco A22-2086	Thermostat	
8403-79	Ranco A22-1114	Thermostat	
8403-80	Klixon 20640L2	Thermostat	(Terminating) Use 8403-114 or -82
8403-81	Ranco A22-2093	Thermostat	
8403-82	T.I. 20640L2-121-209	Thermostat	Use 8403-80, -60, -114
8403-83	Ranco A22-2081	Thermostat	
8403-84	Ranco A22-2094	Thermostat	
8403-85	Honeywell T834D1003	Thermostat	
8403-86	Klixon 204 Series	Limit Control	
8403-87	Honeywell Y494R1014	Sub Base	8403-120 Use 7600-332A
8403-88	Ranco A22-2091	Thermostat	Use 8403-172
8403-89	T.I. 204004-766	Limit Control	
8403-90	T.I. 20400L-2-662	Limit Control	
8403-91	Honeywell Y460D1002	Therm. & Sub Base	
8403-92	Ranco A30-1807, G.E. 3ART17S3, Robertshaw RC32-1163	Thermostat	
8403-93	Ranco A30-1808	Thermostat	Use 8403-92

PART NO.	MANUFACTURER & PART NUMBER	DESCRIPTION	SPECIAL INSTRUCTIONS
8403-94	Ranco A38-1525, G.E. 3ART17, FS26	Thermostat	
8403-95	M.H. 112894FA	Potentiometer	
8403-96	W/R 3A02-202-145	Limit Control	
8403-97	W/R 3A02-201-127	Limit Control	
8403-98	Honeywell Q412J1022	Sub Base	
8403-99	Ranco Type A22-5022, G.E. 3ART24J3	Thermostat	
8403-100	Ranco A30-1849, G.E. 3ART17S1, Robertshaw RC32-1129	Thermostat	
8403-101	Ranco A22-2134 G.E. 3ART24A52	Thermostat	
8403-102	M.H. T822D1008	Thermostat	
8403-103	M.H. T834C	Thermostat	Use 7600-361
8403-104	Honeywell T87F2311	Thermostat	Use 8403-74
8403-105	Never Released	Thermostat	
8403-106	T.I. 20606D20-99	Fan Thermostat	
8403-107	Ranco A22-2163	Thermostat Shut Off	
8403-108	T.I. 20604L/L167-4	Limit Control	
8403-109	M.H. Y494C1168	Therm. & Sub Base	
8403-110	T.I. 20604L/L153-4	Limit Control	
8403-111	Stemco 414-113	Thermostat	
8403-112	Honeywell Q539A1048	Sub Base	
8403-113	G.E. 3ART8J1	Thermostat	
8403-114	Metals & Controls 20640L2-118-462	Thermostat	
8403-115	Stemco 414-117	Thermostat	
8403-116	M.H. T8341295 w/Q634G1035	Therm. & Sub Base	
8403-117	Ranco A22-5029, G.E. 3ART24J7	Thermostat	
8403-118	Metals & Controls 20640L2-118-471	Thermostat	Use 8403-114
8403-119	T.I. 20604L10-659-L140-4	Thermostat	
8403-120	White Rogers 1C70-6	Thermostat	Use 8403-171 or 7600-238A
8403-121	G.E. 3ART17FS25	Thermostat	
8403-122	Tuttle 08-0336, T.I. 204 13L3-871 L160	Thermostat	
8403-123	Honeywell Q672E1001	Sub Base	
8403-124	Honeywell Q672B1012	Sub Base	
8403-125	Honeywell T872B1005	Thermostat	Use 8403-128
8403-126	Honeywell T872E1002	Thermostat	
8403-127	Honeywell Q672C1003	Sub Base	
8403-128	Honeywell T872D1003	Thermostat	
8403-129	T.I. 20604L, L145-5.5	Thermostat	Use 8403-140
8403-130	T.I. 20604L, L130-4	Thermostat	
8403-131	Robertshaw CM260	Thermostat	
8403-132	Robershaw SB4A-5J	Sub Base	
8403-133	Robertshaw SB4A-11	Sub Base	
8403-134	Robertshaw & Ranco	Thermostat	
8403-135	Thermo-disc 11 H13	Limit Control	
8403-136	I.T.T. T344Z127	Thermostat	

8403-4

PART NO.	MANUFACTURER & PART NUMBER	DESCRIPTION	SPECIAL INSTRUCTIONS
8403-137	Sears 9283	Thermostat	
8403-138	Semco L135	Limit Control	
8403-139	Semco L145	Limit Control	
8403-140	T.I. 20604-L155-6.5 Thermodisc 60TX11, L155200956	Thermostat	
8403-141	Robertshaw CM260	Thermostat	
8403-142	General Controls T343Z126	Thermostat	
8403-143	Honeywell T834A1006, Honeywell Q634A1005	Thermostat	
8403-144	Honeywell 7834-A	Thermostat	
8403-145	G.E. 3AAT53A1B1	Thermostat	
8403-146	M.H. T8027B1037	Thermostat	
8403-147	T.I. 20604L45-142	Cut Out	Use 8403-140
8403-148	T.I. 2060D39-179	Thermostat	
8403-149	Honeywell T497A2844	Limit	
8403-150	Honeywell 120935B	Mounting Plate	
8403-151	Honeywell T834A1261	Thermostat	Use 8403-116
8403-152	Therm-o-disc 60TX11L100200957	Thermostat	
8403-153	Sears M.H. T834A1261	Thermostat	
8403-154	T.I. 20654L9-9 L150-5	Thermostat	
8403-155	T.I. 20655L2-8 L190	Thermostat	
8403-156	Honeywell T497A-3222	Limit	Use 8403-149
8403-157	G.E. 3ART45RB2A2 or Thermo-disc 50T20 39709	Thermostat	
8403-158	G.E. 3ART44RB1B1, Thermo-disc 50T2-39268	Thermostat	
8403-159	Therm-o-disc X54080	Limit Control	
8403-159	T.I. 20604L10-659	Limit Control	
8403-160	Therm-o-disc X54075	Limit Control	
8403-160	T.I. 20654L14-3	Limit Control	
8403-161	G.E. 3ART24A76	Thermostat	
8403-162	Therm-o-disc X54079	Limit Control	
8403-162	T.I. 20604L10-701	Limit Control	
8403-163	Therm-o-disc 54076	Limit Control	
8403-163	T.I. 20654L14-26	Limit Control	
8403-164	Therm-o-disc X54078	Limit Control	
8403-164	T.I. 20604L10-816	Limit Control	
8403-165	Therm-o-disc X54077	Limit Control	
8403-165	T.I. 20654L14-9	Limit Control	
8403-166	Thermo-disc 36TR11, T.I. 20704 L	Thermostat-Overlimit	
8403-167	Ranco A22-1075, G.E. 3ART24K6	Thermostat	
8403-168	T.I. 20420L	Thermostat-Terminating	
8403-169	T.I. 20604L	Limit Control	
8403-170	T.I. 20654L	Limit Control	
8403-171	G.E. 3AAT80A5B11 M.H. T872G1265 w/Q672F 1265	Thermostat	
8403-172	Ranco C12-9500	Thermostat	
8403-173	M.H. T872C1004 W.R. 1C71-51 w/Q672B1012	Thermostat	

8403-5

PART NO.	MANUFACTURER & PART NUMBER	DESCRIPTION	SPECIAL INSTRUCTIONS
8403-174	Thermo-disc 60 TX01 L150 201374	Thermostat	
8403-175	Ranco C12-2001-35	Thermostat	
8403-175	Sunne Tf103-016C	Thermostat	
8403-176	Ranco J10-1024, Precision Products 83370	Humidistat	
8403-177	G.E. 3AAT83D11B2 or Honeywell T872G1349	Room Therm. (Add-a-Pump)	
8403-178	Precision Products 83371	Humidistat	Use 8403-176
8403-179	Ranco G1-1057	Thermostat-Discharge	
8403-180	T.I. 20642L4465270	Thermostat	
8403-182	B.E. 3ART5V6, Ranco A30	Thermostat	
8403-186	Texas Inst. 20493L3-105	Limit Control	
8403-187	Thermo-disc 58T2-302624	Thermostat	
8403-188	Ranco A30-2150, Robertshaw RC621015	Thermostat	
8403-189	Therm-o-disc 201996	Thermostat	
8403-190	Therm-o-disc 201995	Thermostat	
8403-196	G.E. 3ART17VA1	Thermostat	
8403-197	G.E. 3AAT83D18C1		
8403-198	G.E. 3AAT83D18B1		
8403-199	Honeywell T874C1000		
8403-200	Honeywell Q674B1075		
8403-202	T.I. 20654L14		
8403-203	United Tech. 431-2544		
8403-204	G.E. 3AAT86B11A1		
8403-205	Ranco A22-1214.00		
8403-206	T.I. 20425F30-5-21-984		Use 7951-254 clip
8403-207	T.I. 20425F49-5-21-984		Use 7951-255 clip
8403-208	Ranco A22-5116-AD		
8403-6001	Robertshaw P15102-36	Thermostat	
8403-6001	Wilcolater B78355724	Thermostat	
8403-6003	M.H. T822D1008	Thermostat	
8403-6004	General Controls T199BL162	Thermostat	
8403-6005	General Controls T199BH100	Thermostat	
8403-6006	Honeywell T87F2535	Thermostat	
8403-6008	Honeywell T87F2600	Thermostat	
8403-6009	White Rogers 1F56313	Thermostat	